



Accu-Tab[®] PowerBase[®]
PowerBase[®] 3500 by Westlake Water Solutions

Installation and Operating Instructions

DANGER:

DO NOT MIX CHEMICALS!

PowerBase chlorinator systems are designed for use with Westlake Water Solutions approved tablets only. Do not use Cal-Hypo tablets with stabilized chlorine or bromine products, or other sanitizing chemicals.

Fire or explosion could result.

System Description

The ACCU-TAB® tablet chlorinator system incorporates a Westlake Water Solutions chlorinator, which is designed to utilize Westlake Water Solutions ACCU-TAB® Blue SI calcium hypochlorite tablets. The chlorinator is mounted on an aluminum frame. Included in the system is an integrated, level controlled solution tank, which supplies a centrifugal pump. The flow rate through the system is controlled by a manually adjusted valve located on the discharge of the pump. The solution tank level is controlled by a float valve. As solution is pulled from the tank, the float valve opens allowing water to flow to the chlorinator, contacting the tablets, and then draining into the solution tank.

Overflow protection is standard. Two additional level switches in the top area of the Solution Tank (4" apart) will flip a relay in the electrical box causing the pump to turn on/off as needed.

The chlorination system is designed for use ONLY with Westlake Water Solutions Accu-Tab Blue SI tablets utilizing the Westlake Water Solutions erosion feeder technology that erodes only the bottom layer of tablets on the sieve plate, while keeping tablets above the sieve plate dry and ready for use. Tablets other than Westlake Water Solutions Accu-Tab Blue SI tablets will have different delivery rates, resulting in improper chlorine delivery.



Installation Instructions



1. Place the chlorination system in a location near the place of application.
2. Level the system. This is important for proper chlorine delivery.
3. Connect the inlet (located on the solution tank) using 2" PVC pipe or hose. Include an Isolation valve in the line and the supplied inlet filter.
4. Check pressure of inlet supply line. Float valve will leak through at pressure exceeding 28 psi. If pressure exceeds 28 psi, a pressure regulator and/or an inlet solenoid valve may be required.
5. Connect the discharge assembly to the pump using a section of 1-1/2" pipe. (The parts were shipped loose to prevent breakage in shipment.)
6. Connect the discharge piping from the feeder to the chlorine application point with 2" PVC pipe or hose. Include an isolation valve in the line.
7. Plug the power cord into a 120v 20amp receptacle.



8. If a chemical controller is utilized, plug the controller cord into the controller's 120v switched output.

Start Up

1. Close the discharge gate valve.
2. Open the feed and discharge isolation valves. Water will begin to fill the solution tank.
3. When water stops flowing, switch the system "ON" using the chemical controller. The pump will circulate water through the black tubing.
4. Check that the float valve is not leaking through on applications where the inlet supply is greater than 25 psi.
5. Begin opening the discharge gate valve to start flow in and out of the system.
6. Determine the maximum inlet flow rate by continuing to open the discharge gate valve in small increments. Remember to allow a few minutes each time to allow the flow meter to stabilize. If pump loses prime, maximum inlet flow has been exceeded. Shut down system for a few minutes (which will prime the pump), close back on the discharge gate valve and restart the system. Continue this process until the maximum inlet flow is determined.
7. Adjust flow through feeder using the discharge gate valve. The chlorine delivery is determined by the flow rate through the chlorinator. NOTE: After adjusting the discharge valve, the flow meter will take a few moments to stabilize.
8. Check all piping for leaks.

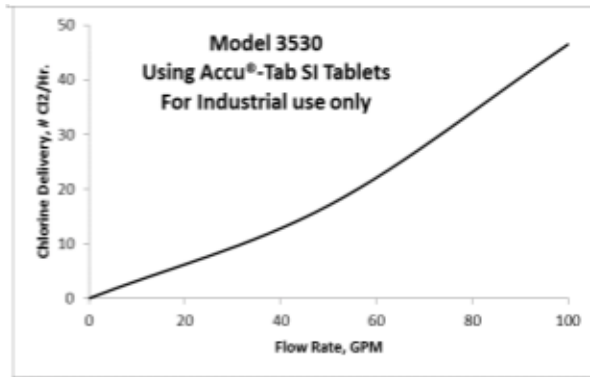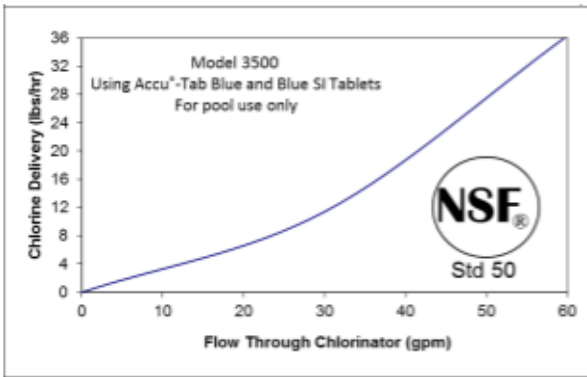

Operation

1. Remove lid from chlorinator and fill with the appropriate amount of Accu-Tab Blue SI tablets. Add no more than the amount of tablets that will be used within one week.
2. Check pool water for desired chlorine level and adjust flow through chlorinator as needed.

MINIMUM SUPPLY WATER FLOW REQUIREMENT – 60 gpm

NOTE: When pool water circulation stops, flow to chlorinator will stop. This will stop chlorine delivery.

WARNING: Overdosing of free chlorine can lead to bather irritation (skin, eyes, nasal, etc.).

Adding Tablets

1. Tablets may be added while the system is running. Take care to protect eyes, skin, clothing and other equipment from splashing. Do not inhale fumes.
2. Remove lid and add Accu-Tab Blue SI tablets.
3. Replace lid.

Maintenance

Clean the Check and Float Valves at least every 4-6 months, or as needed, to remove scale or debris.

Winterizing

1. Clean chlorination system following instructions below.
2. Close inlet isolation valve and operate pump until no more water can be pumped out.
3. Shut system down and close the outlet isolation valve.
4. Siphon any remaining water from the solution tank.
5. Remove any debris from the chlorinator or solution tank.
6. Open the bottom drain on the pump.
7. Drain water from feed and discharge lines.
8. Make sure no water remains in the pump, chlorinator, pipe line, or solution tank to prevent freezing over the winter.

System Cleaning

Over time the chlorination system may develop a build-up of scale. This should be cleaned on a periodic basis, up to twice per year. If scale formation is severe, more frequent cleanings may be necessary. Cleaning may be accomplished by soaking the chlorinator with a dilute acid solution according to the instructions below.


NOTE: Addition of muriatic acid may lower the pH of the pool water

Preparation for cleaning

1. Prepare 2 Gallons of weak muriatic acid solution.
2. **Always use** appropriate safety equipment while servicing the unit or handling chemicals.
3. Clean the feeder in a well-ventilated area. Chlorine gas may be released during the cleaning process!

Inlet/Outlet Bypass

To facilitate the cleaning process a Bypass may be installed between the inlet and outlet lines to/from the chlorination system. Isolation valves at the re-circulation line are required.

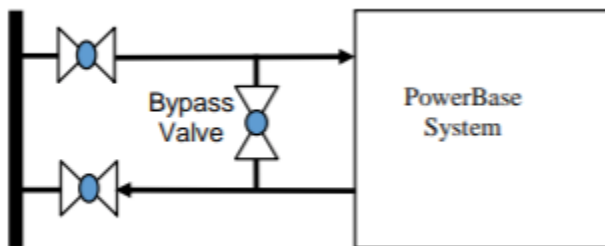

Cleaning procedure

1. Turn system off.
2. Open lid and remove all tablets. Use proper protective equipment when handling chemicals.
3. Switch system on to begin flushing the system.
4. Wash out the feeder with a hose to remove remnants of tablets and loosen scale.
5. Operate system until normal solution tank level is achieved. Switch system off.
6. Close inlet and outlet isolation valves and open inlet/outlet Bypass valve (if installed).
7. Very carefully, pour the acid into the upper chlorinator to dissolve scale. It may be necessary to pour directly on the inside walls to remove any scale above the water level. Always add acid to water, never add water to acid.
8. Let soak for 30 minutes. As acid dissolves scale, carbon dioxide will be released, and foaming will occur. If any tablets were left in the feeder, chlorine gas may also be released.
9. Turn system on to start acid circulation through the blue tubing. Circulate for 10 minutes.
10. Open all valves to begin purging acid from system. Shut Bypass valve.
11. Wash the walls and sieve plate of the feeder with a hose to remove all acid residue. Chlorine gas may be released if any acid remains in the system.
12. Allow feeder to flush water for 30 minutes.
13. Turn system off. System is ready for operation.

Troubleshooting

System overflows.

1. Check for debris in the float valve.
2. Check for debris in the check valve.

3. Float valve stuck in down position. Clean float valve. DO NOT use any lubricant on the valve internals.

Pump will not run.

1. Check power supply and connections, and controller 120v signal.
2. Check for 120 voltage across terminals #2 and #5. If voltage present, wiring or pump motor failure.


Pump loses prime (solution tank drains)

Maximum inlet flow exceeded. See Start-Up instructions—point #6.


Float Valve maintenance


If valve becomes clogged with debris on a continuing basis, add a second filter to the inlet. Use the 60 mesh in the first filter then a 100 mesh in the second. The 100 mesh filter can be supplied by your specialist.

Contact Westlake Water Solutions Technical Service (855-934-3570) for assistance.

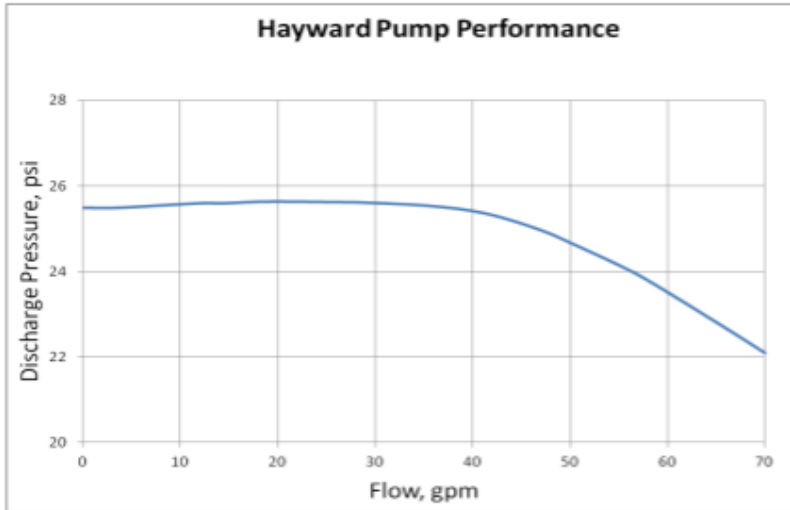

PurAqua Part #: PAPP1500
 Pump Frame: R48Y
 Amp rating: 15 amps

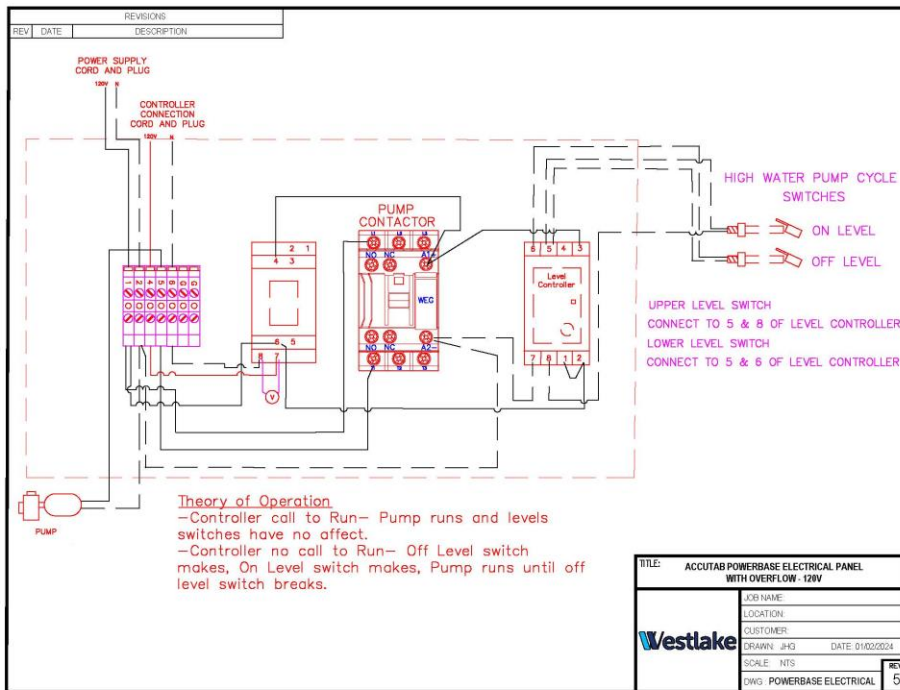

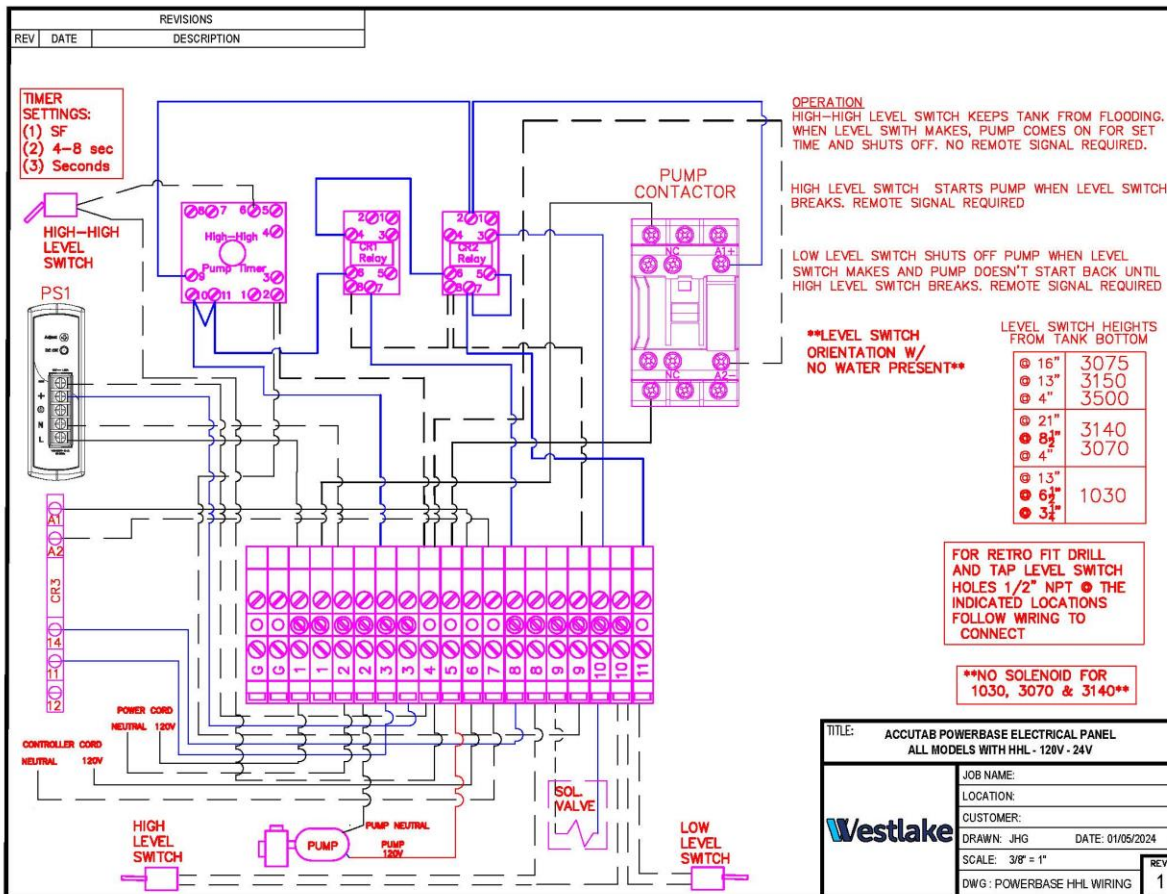

PowerBase Replacement Parts	PurAqua Part #	Westlake Water Solutions Part #
Hayward 1 1/2 HP Pump	PAPP1500	9500080
Seal for Hayward Pump	SPX1250XZ2C	
Webtrol 1 1/2 HP Pump	PC150R	9500185 Option
Seal for Webtrol Pumps	70X130-M	Option
Pump Contactor		9500145
1 1/2" Saddle Clamp Flow Meter	F-30150P	9500005
Level Switch	M8710	9500084
1 1/2" Discharge Swing Check Valve	S1720C-15	9500077
1 1/2" Gate Valve	GVG-1500-S	9500006
2" Inlet Filter	2-60-F	9501015
Float Valve	Kerick 1-1/4"	9501071
Plunger and pin	Kerick 1-1/4"	9501072
8" Float Ball		9501073

CAL-HYPO COMMERCIAL SYSTEM LIMITED WARRANTY

Westlake Water Solutions warrants (subject to the below conditions) only its title to this water treatment system equipment (the "System") and that the System will be free of defects in materials and workmanship for a period of eighteen (18) months from its original shipment date.

THIS IS THE ONLY REPRESENTATION OR EXPRESS WARRANTY THAT WESTLAKE WATER SOLUTIONS MAKES AND ALL OTHER EXPRESS WARRANTIES UNDER STATUTE OR ARISING OTHERWISE IN LAW FROM A COURSE OF DEALING OR USAGE OF TRADE WITH RESPECT TO THE SYSTEM ARE DISCLAIMED. ANY IMPLIED WARRANTIES EXISTING AS A MATTER OF LAW SHALL NOT EXCEED THE DURATION OF THIS LIMITED WARRANTY. IN THE EVENT THE SYSTEM FAILS TO CONFORM TO THIS WARRANTY, WESTLAKE WATER SOLUTIONS EXCLUSIVE OBLIGATION AND YOUR EXCLUSIVE REMEDY SHALL BE LIMITED TO, AT WESTLAKE WATER SOLUTIONS OPTION, THE FURNISHING OF NEEDED REPLACEMENT PARTS OR THE FURNISHING OF A NEW SYSTEM (BUT THIS DOES NOT INCLUDE INSTALLATION OR THE COSTS FOR INSTALLATION). EXCEPT AS PROVIDED IN THE IMMEDIATELY PRECEDING SENTENCE, IN NO EVENT WILL WESTLAKE WATER SOLUTIONS BE LIABLE UNDER ANY THEORY OF RECOVERY (WHETHER BASED ON NEGLIGENCE OF ANY KIND, STRICT LIABILITY OR TORT) FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES IN ANY WAY RELATED TO ANY USE MADE OF THE SYSTEM.

Warranty Conditions. This Limited Warranty shall apply and be effective only if: (i) the System is installed and operated and maintained in accordance with this manual and the instructions accompanying the System; (ii) you, at your cost, promptly return the System or defective part to such location as may be specified by Westlake Water Solutions; and, (iii) only Westlake Water Solutions Accu-Tab® Blue SI calcium hypochlorite tablets are used in the System. If any of these conditions are not met, this Limited Warranty will not apply and you acknowledge and agree that your purchase of the System will be on an "AS-IS" basis without any warranty of any kind whatsoever having been provided by Westlake Water Solutions.

You assume all responsibility and risk and liability arising from: (i) the unloading, installation, storage, handling and use of the System, including use thereof alone or in combination with other materials; (ii) the improper functioning or failure of unloading, installation, transportation or storage equipment you use, whether furnished or recommended by Westlake Water Solutions or not; and, (iii) the failure to comply with laws, rules and regulations governing storage, unloading, installation, handling, and use of the System. You will indemnify, hold harmless, and defend Westlake Water Solutions from and against any claim, suit, damage, cost, expense, fine, liability, or cause of action whatsoever, including reasonable attorney fees, on account of relating to, or arising out of the use, possession, installation or resale of the System.

This Limited Warranty gives you specific rights, and you also may have other rights, which vary from jurisdiction to jurisdiction. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

©2025 Westlake Water Solutions. Acid-Rite is a registered trademark of Westlake.
Westlake Water Solutions 2801 Post Oak Blvd., Suite 600, Houston, TX 77056 USA
www.westlakewatersolutions.com
Technical Support: 855-934-3570

*220v 50hz power is available upon request

Disclaimer: The information presented herein is for general informational purposes only. Products are subject to standard terms and conditions of sale, which are available upon request. No warranty, express or implied, including, but not limited to, any warranty of merchantability or fitness for a particular purpose, is made, and any and all warranties on such products are limited to those expressly set forth in the applicable entity's standard terms and conditions. Any reliance the user places on the information presented here is strictly at the user's own risk.

3038 0125